




# INSTALLATION & OPERATION

## LN 2000 GAS FIRED KILN


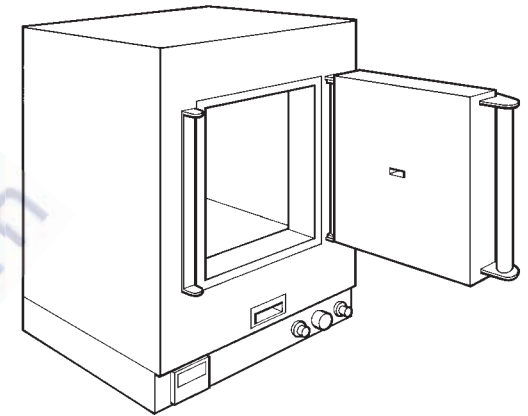


### INSTALLATION

For ease of packing and safety during transit, the flue and floor tile are packed separately.

The flue is fitted to the back with the screws provided and the floor tile placed inside the kiln and located within the cut outs.

A suitable position for the kiln should be found where the rear face is approximately 12 inches away from any upright surface, and where the air passage from the flue is unrestricted.

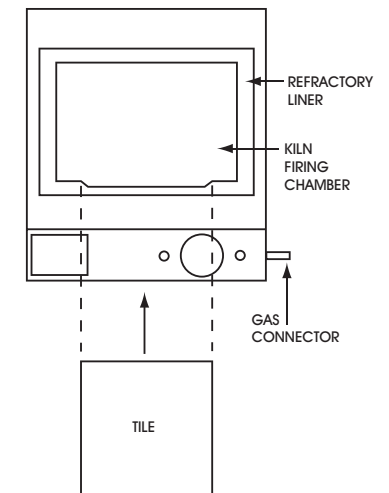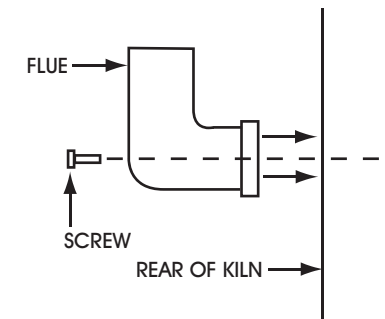

**DO NOT, UNDER ANY CIRCUMSTANCES, COVER THE FLUE AS THE EFFICIENCY OF THE UNIT WILL BE LOST.**



FLAMEFAST (UK) LIMITED

Unit 2 · Labtec Street · Swinton · Manchester M27 8SE

Telephone 0161 793 9998 · Fax 0161 793 0098

www.flamefast.co.uk · email: sales@flamefast.co.uk

## CONNECTION

If connecting to a natural gas supply, please contact your local approved CORGI (Council for Registered Gas Installers) installer or if using bottled propane/butane gas please contact your local LPG gas supplier.

Should either yourself or your gas supplier wish to connect the gas supply by rubber hose, a suitable connector for 5/16th bore hose is supplied.


The hose should be a good fit and further secured by a jubilee clip.

Do not screw the adaptor to the gas inlet without using an approved gas sealing compound. After fastening both adaptor and hose, test for gas tightness by using soap/water solution around the connections.

Should expanding bubbles form, remove the adaptor and hose and check their condition.

If good, re-fasten and check again.

**DO NOT UNDER ANY CIRCUMSTANCES USE THE KILN IF THERE ARE ANY GAS LEAKS.**

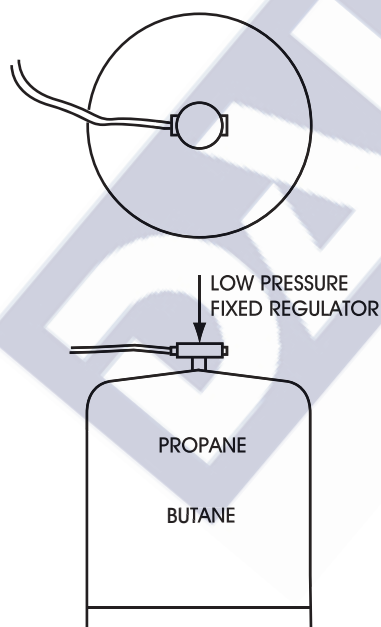

## GAS SUPPLY

It is important that the kiln is supplied at the correct pressure. If connecting to propane/butane a LOW PRESSURE FIXED REGULATOR must be fitted.

The gas pressure for propane is 35mb and for butane it is 28mb.

GAS	RATE	PRESSURE
Natural Gas	0.6m <sup>3</sup> /h	20mbar
Propane	0.46kg/h	35mbar
Butane	0.46kg/h	28mbar

## OPERATION

To operate the kiln follow the instructions on the front of the unit.

**NEVER LIGHT THE KILN WITH THE DOOR CLOSED.**

**CAUTION - USE ONLY APPROVED FLEXIBLE HOSES.**

**READ ALL INSTRUCTIONS BEFORE USE AND INSTALLATION.**

*Flamefast would like to point out that cracks may form in the insulation refractory materials of this unit.*

*These are quite normal and will not affect the performance or life of the material.*

